

Use this information with door manual.

The i-COMM™ 3 Touch Screen Controls are used to manage and adjust settings for Rite-Hite doors.

FEATURES

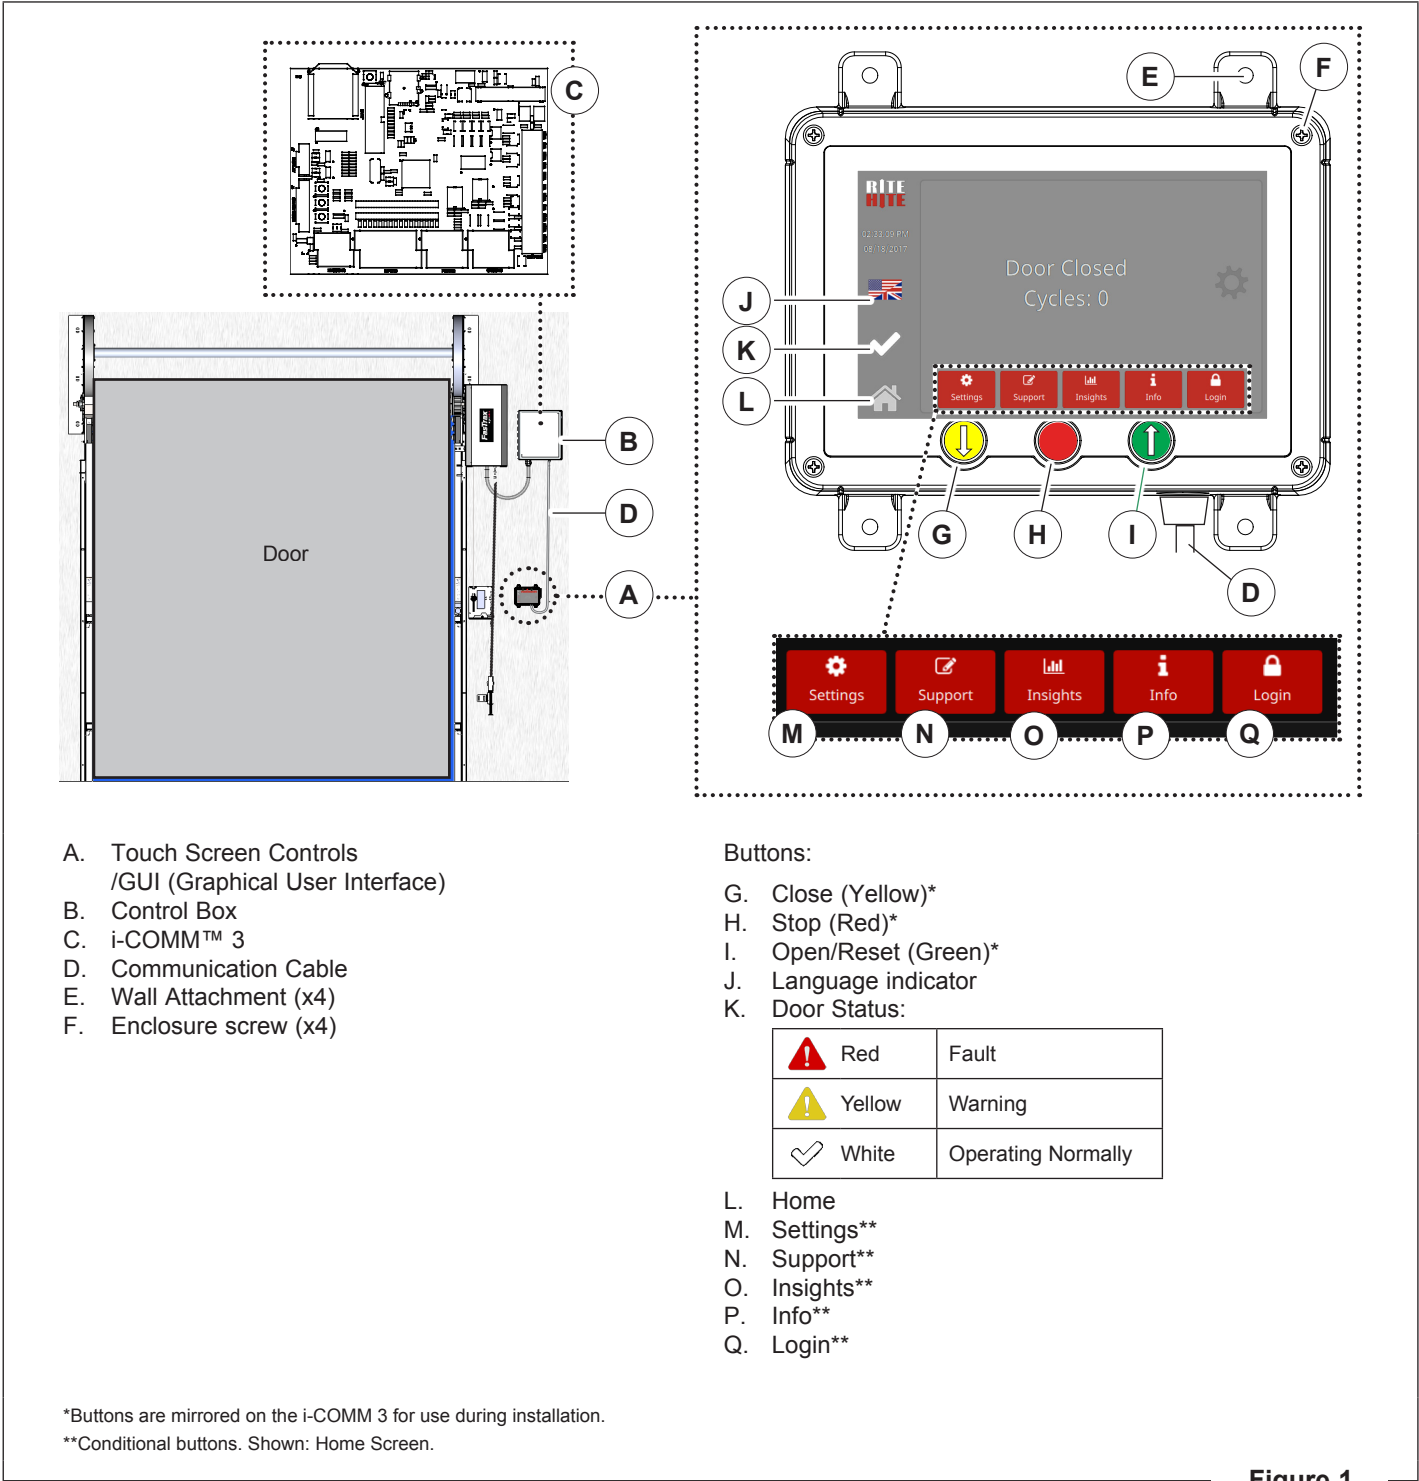


Figure 1

OPERATION

Opening, Closing, and Stopping

See "Figure 1".

#	OPERATE DOOR:	PRESS BUTTON:
G	Close	Yellow
H	Stop	Red
I	Open/Reset	Green

Optional activation devices (e.g., motion/presence sensors, photoeyes, radio controls, pull cords, push buttons, and floor loops) can be used to open and close the door. Contact your local Rite-Hite representative for specific instructions based on your application.

Security

All parameters are protected by a PIN (Personal Identification Number). Login is required before changing any settings.

NOTE: Default PIN for the user is 3667.
PIN can be changed (**Home ► Login ► Settings ► General ► Security ► User PIN**).

To Login (see Figure 1):

1. Press **Home** (L)
2. Press **Login** (Q)
3. Enter PIN
4. Press **Login**

The display will return to the main screen after successful login

NOTE: The system will log you out automatically based on Logout Time specified (**Settings ► Timers ► Advanced ► Logout Timer**).

OPERATION

Common Locations

LOCATION:	NAVIGATE TO:
Activation Wiring Help	Home ► Support ► Activation ► Help (choose screen)
Fault and Change History	Home ► Support ► Logs ► (choose screen)
Local Representative	Home ► Support ► Local Rep.
Troubleshooting Guides – Faults	Home ► Support ► Fault Help (choose screen)

Common Tasks

TASK	NAVIGATE TO:
Change PIN	Home ► Login ► Settings ► General ► Security ► User PIN
Limit (Encoder) Setup	Reset all limits: Home ► Login ► Settings ► Limits ► Limit Setup Follow all on-screen prompts
	Adjust Open Limit: Home ► Login ► Settings ► Limits ► Open Position Adj. To adjust the limit so the door opens: • Further, enter a positive value. • Less, enter a negative value.
	Adjust Close Limit: Home ► Login ► Settings ► Limits ► Close Position Adj. To adjust the limit so the door closes: • Further, enter a negative value. • Less, enter a positive value.
	Door Closing Timers Home ► Login ► Settings ► Timers Total open time is the sum of Close Timer and Pre-announce to Close Timers. or Total open time = Close Timer + Pre-announce to Close Timers
Reset Maintenance	Home ► Login ► Settings ► General ► Reset Maintenance
Network Setup	Wired Home ► Settings ► Setup Wizards ► Network
	Wireless Home ► Settings ► Setup Wizards ► Network Install USB wireless module. Home ► Settings ► Setup Wizards ► Wi-Fi

TROUBLESHOOTING

COMMON STARTUP ISSUES:	SOLUTION:
Blank Screen	• Verify that SD card on the back of the touchscreen is seated properly • Verify unit is receiving power

PARTS

#	QTY	DESCRIPTION	PART #
1	1	Module,Network,Wifi,USB	51950106
2	1	Terminal,PX,Cage,3Hole,Bar	73100101
3	1	Terminal,PX,Cage,24A,Jump,2P	73100099
4	4	Terminal,PX,End Stop,Screwless	73100098
5	3	Terminal,PX,Cage,3Hole,GND	73100097
6	7	Terminal,PX,Cage,24A,3Hole	73100096
7	1	Cable,Touch,50' (Non FSTXXL Models)	15650343
8	1	Cable,Touch,75' (FSTXXL Only)	15650344
9	1	Kit,i-COMM 3,Replacement	53701043
10	1	Interface,GUI,IP67	55150353

#	QTY	DESCRIPTION	PART #
11	1	Kit,Inv,2Hp,230V,1-3PH,M200	53701041
12	1	Kit,Inv,2Hp,460V,3PH,M200	53701042
13	2	Ftg,Strt,L/T,PG11,3.5-1mm	45550004
14	1	Radio, Wireless Interlock	55150534
15	1	Control Box, i-COMM 3, Fastrax	1712
16	1	Control Box, i-COMM 3, FastraxCL	1713
17	1	Control Box, i-COMM 3, FastraxXL	1714
18	1	Control Box, i-COMM 3, Litespeed	1714
19	1	Control Box, i-COMM 3, Splitsecond	1711